

Mit Sicherheit gut aufgehoben.



EN

Short manual instruction
Electronic lock E 80000



Short manual instruction E 80000

a) Unlocking with opening code

Button	Signal	Description
	(after each button press)	Entering opening code
Boltwork is open		LED light active while opening
Opening procedure is over	= open	= error
After 3 sec.	Turn the handle	Door is to be open

* Instances rely on factory code

b) Locking

Button/instance	Signal	Description
Push the door		The door should fit tightly against the cabinet.
Turn the handle/lock the boltwork		Handle moved by 90°
		Boltwork is locked
Locking procedure indicated by sound signal	= locked	= Boltwork blocked












 





c) Changing of opening code*

	Button/ Description		Signal
 	 3sec Press and hold the button for approx. 3 sec.	3sec	3 x
	 Enter the current opening code		2 x
	 Enter the new opening code Repeat the new opening code 		1 x




*The change of opening code is possible only when the boltwork is unlocked/ Instances rely on factory code

Short manual instruction E 80000

d) Opening with Supercode*

Button	Signal	Description
* 9 sec	  9sec    	Opening with Supercode started
1 1 1 1 1 1 1	  (after each button press)	Entering current Supercode
Boltwork is open		LED light active while opening
Opening procedure is over	   =  open	  =  error
After 3 sec.	 Turn the handle	Door is open

* Instances rely on factory code

-  Please remember to change all factory codes before commissioning. All pieces of information regarding factory codes can be found in the full version of this manual.
-  Do not operate the handle until the lock is completely open (LED blinks twice). There should be at least 3 seconds between entering the code and operating the handle.
-  After an incorrect code entry, the process can be repeated three more times. After four incorrect entry attempts, a blocking time of 5 minutes comes into effect (manipulation block). You will hear a short tone every 8 sec. when the LED blinks. Avoid pressing the keypad during the manipulation block. This prolongs the locking period..

Mit Sicherheit gut aufgehoben.



www.hartmann-tresore.de

HARTMANN TRESORE AG

Pamplonastraße 2

33106 Paderborn

Deutschland

+49 (0)5251 1744-179

support@hartmann-tresore.de